

Zinc Alloy

100 KG



Satin Brass US4



Flat Black C19

Finishes Available :

068-GE100-26D

068-GE100-C19

Adwork
RESEARCH AND
MANUFACTURER
OF 3D HINGES

Maximum Weight 100kg / Pair
Minimum Door Thickness :40mm


 

Qty : 2 Pcs

**Stocking Distributor
in Canada**





GE100 Specification

REGULATING FUNCTION 调节功能

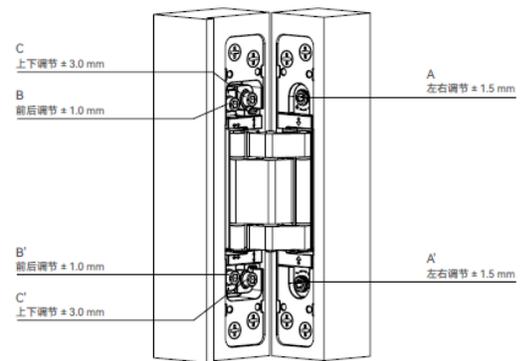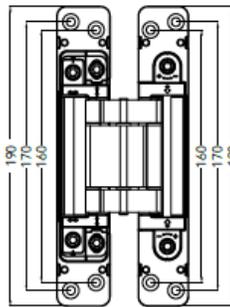

INSTALLATION DIAGRAM 开孔安装示意图

OPENING DIAGRAM 开孔图

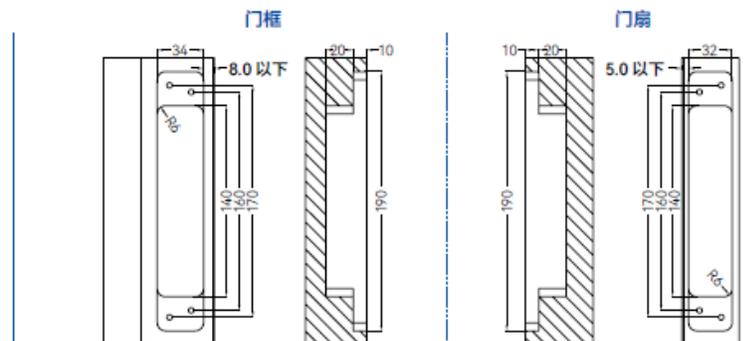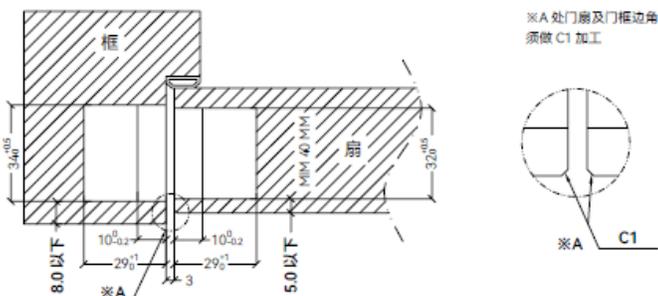







Installation instructions

i


3D Adjustable Hidden Hinge

Material: Zinc alloy


GE100

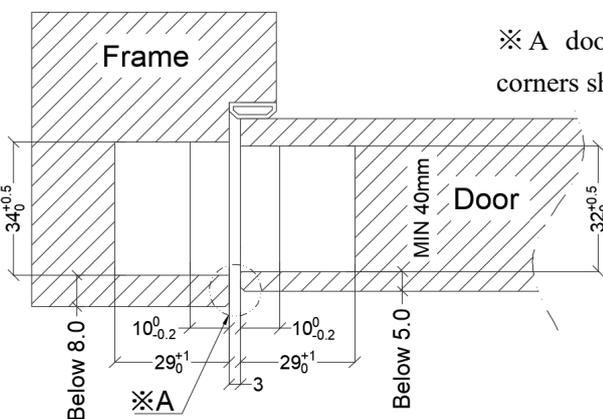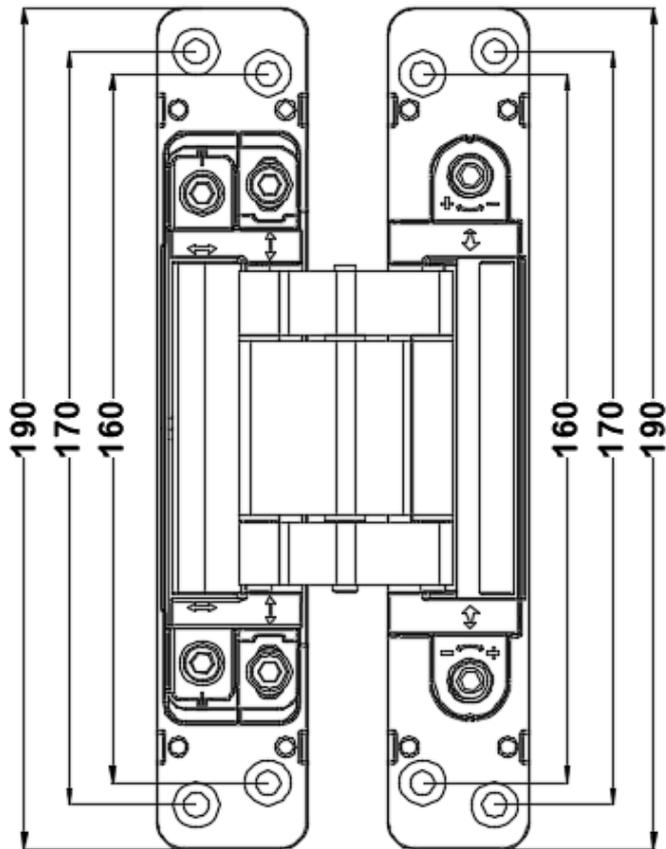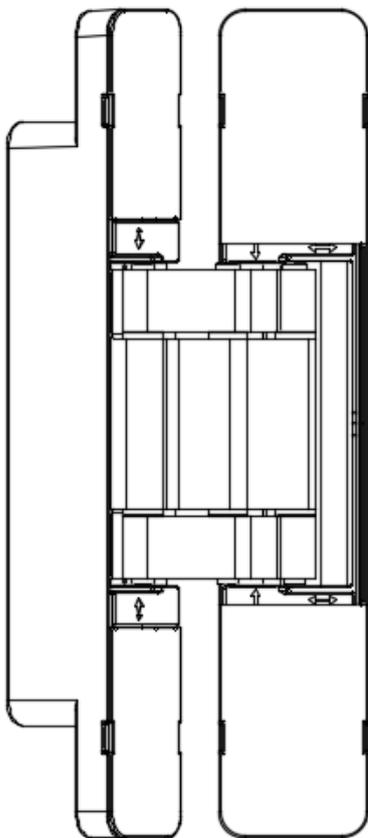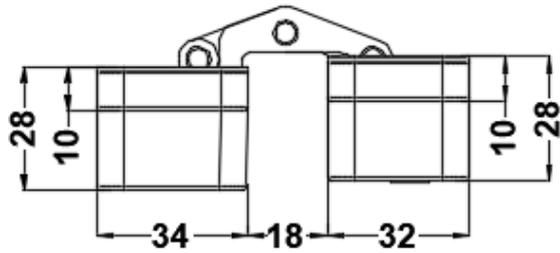

※ A door leaf and door frame corners shall be processed by C1

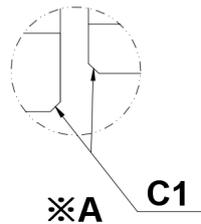

Maximum Weight 100KG

 

Left and right adjustment: $\pm 1.5\text{mm}$
Up and down adjustment: $\pm 3.0\text{mm}$
Front and rear adjustment: $\pm 1.0\text{mm}$




Packing case includes: 2 hinges, 16 $\varnothing 5 \times 40\text{mm}$ wooden screws, 1 installation manual



Installation instructions


1

Slot the door leaf and frame as shown in the image below.

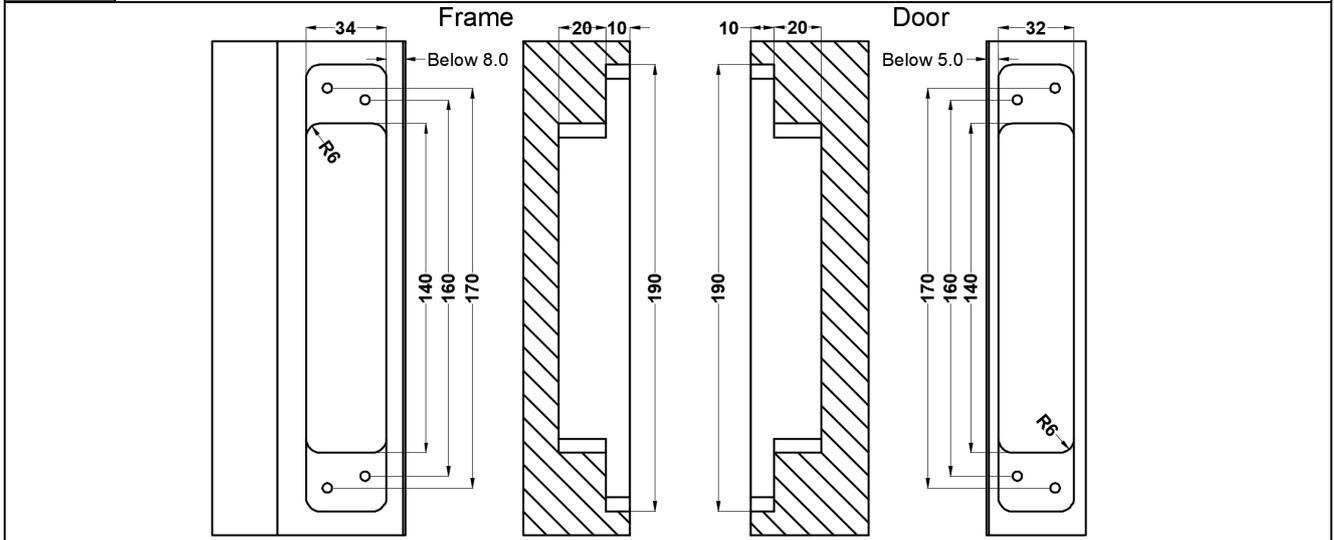

2

1. As figure①shown install the side marked “Door” in the hole of the door leaf, Use a Phillips screwdriver to place the product into the inside door leaf;
2. As figure②shown install the corresponding position of the door leaf with the product in the door frame with a hole, and tightened with Phillips screwdriver.
3. After the installation and commissioning, ensure the hinge is firm and stable. The hinge surface should be flush with the side of the door leaf and frame.

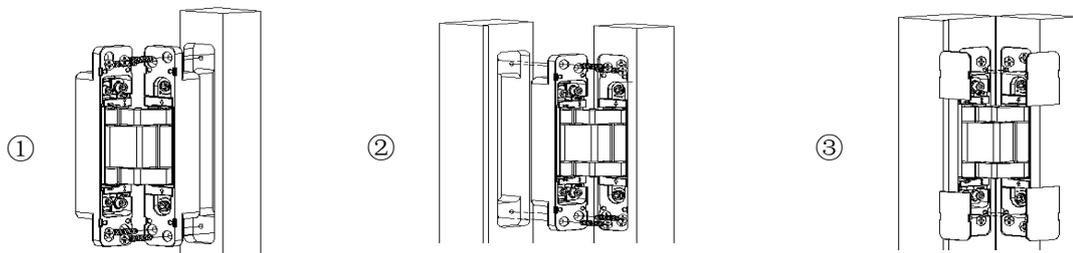

4. Repeatedly operate the door leaf to open and close many times, check that everything is in order for the customer to use.
5. Pay attention the hinge daily maintenance, keep it clean, meanwhile can be applied with the small amount of grease (oil).

3

Installation and adjustment function:

Left and right adjustment: Use Allen key to match A/A'. Clockwise adjust will increase the door gap, counterclockwise adjust will decrease the door. (Note: adjustment must be Synchronized!)

Front and rear adjustment: Loosen the B/B' screw counterclockwise to adjust it and then drop lock;

Up and down adjustment: Loosen the C/C' Screw counterclockwise to adjust it and the drop lock.

