

Recommended Spacing of SOSS® Hinge

Notice in the illustration showing three hinges, that the "center" hinge is not shown in the usual location near the center of the door. The "center" hinge should be located one-half the distance from the horizontal center line of the door to the center line of the top hinge.

On installations requiring four SOSS Invisible Hinges, the second hinge from the top should be located one half the distance from the door's horizontal center line to the center line of the top hinge. The third hinge from the top should be located one-quarter of the "A" dimension below the horizontal centerline of the door.


NOTE:

For spacing information beyond what is shown, look up our website at www.soss.com.

*Instructions for mounting
 SOSS® Invisible Hinge®*

#212

Intended for 1-1/8" doors

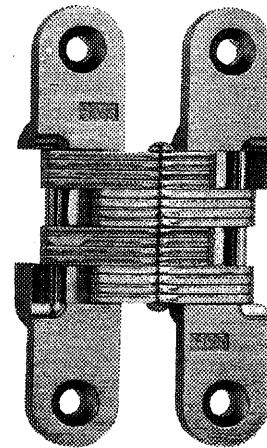

Congratulations!


You have just

purchased the

SOSS® Invisible Hinge.

Smooth, secure

and beautiful.

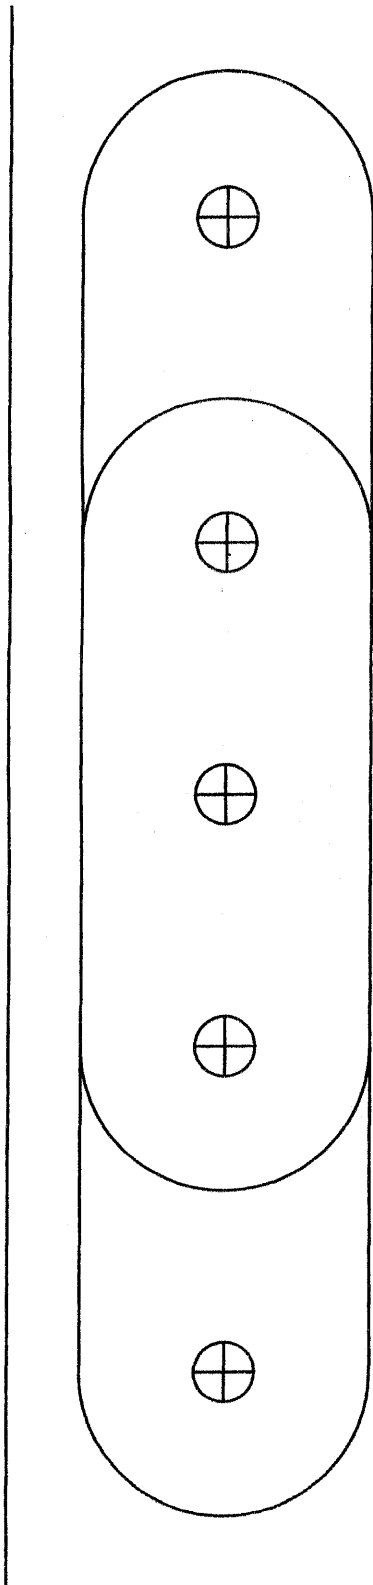

*Template for mounting
SOSS® Invisible Hinge®
#212*

1. Fold template on solid line and place on side of door in direction of swing.
2. With sharp point, pierce through five cross hairs for centers.
3. Use 3/4" boring bit. Bore two end holes 3/8" deep and the center three holes 1-5/64" deep.
4. Connect holes with chisel or router to form mortise.
5. Caution—Do not hammer or force hinge.
6. Drill pilot holes for screws. Use a No. 43 (.0890") drill bit for soft wood or No. 31 (.1200") for hard wood. Use a #3 Phillips screwdriver for the enclosed #10 x 1-1/4" wood screws.
7. Lubrication may be used.

UIP

Universal Industrial Products, Inc.
P.O. Box 628
Pioneer, OH, USA 43554-0628
Email: hinges@sooss.com
Internet: www.sooss.com

© Copyright 2007
Universal Industrial Products, Inc.

Note: Template scale may have changed.